




ELNUR

HOW TO CHANGE ECOHHR PLUS TEMPERATURE

Temporarily change your storage heaters temperature

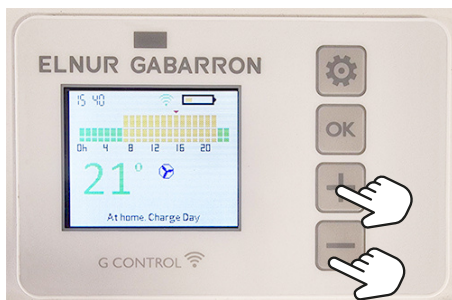

Step 1:

To change the temperature, press the **+** or **-** button.



Learn how to permanently change your temperature settings




Video guide here



ELNUR


HOW TO CHANGE ECOHHR PLUS TEMPERATURE

Permanently change your storage heaters temperature

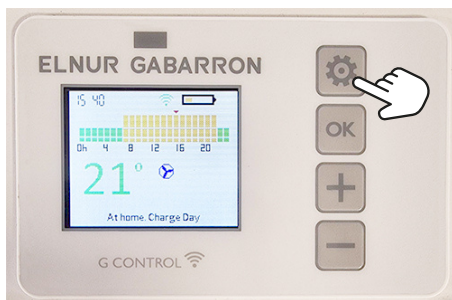



Step 1:

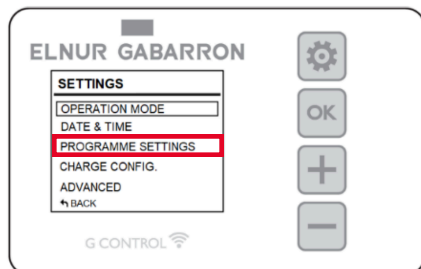
Hold down the  button until the display changes.




Step 2:

Use the  or  button to move up or down until you get to the “Programme Settings”.

Once there, press the  button

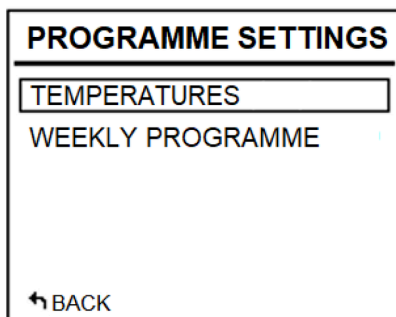

Step 3:

The display should change to this. Press the  button to enter the “Temperatures” settings.







ELNUR


HOW TO CHANGE ECOHHR PLUS TEMPERATURE




Permanently change your storage heaters temperature

TEMPERATURES	
COMFORT	21.5°
ECO	18.0°
ANTI-FROST	7°
↩ BACK	

Step 4:

Use the  and  buttons to move up or down until you get to the temperature mode that you want to adjust.

Press and release the  button to change the preset temperature.

Use the  or  buttons to adjust the temperature. Once you are done, press the  button until you return to the home screen.

